

(Valid for: all Editions of LS3 Maintenance Manual)

Check air brakes for jamming/locking during retracting under load:

		Inspector
1	Check air brake levers in wing for corrosion at lower end.	
2	Check air brakes for jamming/locking during retracting under load: Simultaneously apply about 25 kg <55 lbs> to the rear at each lever without twisting upper member and retract.	
3	When under the load according to item 2 any kind of jamming on wing occurs, bearings must be replaced according to repair instruction "Air Brake Levers" immediately.	
4	With corrosion existent, but no jamming, bearings must be changed within 6 months.	

Prepared: 18. Oktober 1999 <i>Heck</i>	Verified: <i>Wagner</i>
---	-------------------------

D:\GS\TMTM3051\_2.doc /08:42