

Check air brakes for jamming/locking during retracting under load:

| | | Inspector |
|---|---|-----------|
| 1 | Check air brake levers in wing for corrosion at lower end. | |
| 2 | Check air brakes for jamming/locking during retracting under load: Simultaneously apply about 25 kg <55 lbs> to the rear at each lever without twisting upper member and retract. | |
| 3 | When under the load according to item 2 any kind of jamming on wing occurs, bearings must be replaced according to repair instruction "Air Brake Levers" immediately. | |
| 4 | With corrosion existent, but no jamming, bearings must be changed within 6 months. | |

Prepared:

18. October 1999

Geck

Verified:

Wagner