


SPECIAL TOOLS

- ① 10 mm box end wrench, 90° angle
- ② 10 mm socket with ratchet
- ③ 13 mm open end wrench
- ④ 13 mm open end wrench welded to tube with crossbar, tube at least 35 cm (14 inch) long
- ⑤ 14 mm open end wrench welded to tube with crossbar, tube at least 22 cm (9 inch) long

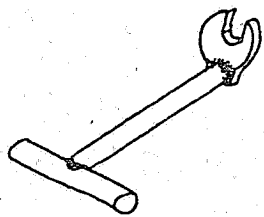

Aileron system simplified

Adjustment at a,b and c must be the same amount and the same direction, shortening or lengthening!

